

# Contents

<b>1 Introduction</b>	<b>4</b>
1-1 SmartCraft data available from different engines	4
1-2 What comes with your gateway	5
<b>2 Installation</b>	<b>6</b>
2-1 Connecting the gateway to the SmartCraft system	6
2-2 Connecting the gateway to the Navman instrument	7
2-3 Installation	7
<b>3 Operation with a Navman FISH 4380</b>	<b>8</b>
3-1 Setting up the FISH 4380 for SmartCraft	9
3-2 SmartCraft Engine data displays	10
3-3 Troll control	11
3-4 Trim indicator	12
3-5 Engine fault alarms	12
3-6 Engine fault lists	13
3-7 SmartCraft setup data	14
3-8 SmartCraft calibration	16
<b>4 Operation with a Navman TRACKFISH 6600</b>	<b>18</b>
4-1 Setting up the TRACKFISH 6600 for SmartCraft	19
4-2 SmartCraft engine data displays	19
4-3 Troll control	21
4-4 Trim Indicator	21
4-5 Engine fault alarms	22
4-6 Engine fault lists	22
4-7 SmartCraft setup data and calibrations	23
<b>5 Operation with a Navman FISH 4600</b>	<b>27</b>
5-1 Setting up the FISH 4600 for SmartCraft	28
5-2 SmartCraft engine data displays	28
5-3 Troll control	30
5-4 Trim Indicator	30
5-5 Engine fault alarms	31
5-6 Engine fault lists	31
5-7 SmartCraft setup data and calibrations	32
<b>Appendix A Specifications</b>	<b>36</b>
<b>Appendix B Troubleshooting</b>	<b>36</b>
<b>Appendix C SmartCraft accessories</b>	<b>37</b>
<b>Appendix D How to contact us</b>	<b>38</b>

# 1 Introduction

The Navman SmartCraft™ gateway connects one or two SmartCraft capable Mercury petrol/gasoline engines to a SmartCraft capable Navman instrument, such as the FISH 4380, FISH 4600 or TRACK-FISH 6600. The single gateway is for single engines, the dual gateway is for twin engines.

Adding the gateway extends the functions of the Navman instrument, allowing the instrument to:

- Display engine data, such as speed, RPM, pressures, tank levels.
- Control troll speed and display trim.
- Sound an alarm if it detects an abnormal engine condition.

This manual describes:

- How to install a Navman SmartCraft gateway.
- How to use the SmartCraft functions of a Navman SmartCraft capable instrument. Refer to the separate Navman instrument *Installation and Operation Manual* for information on how to install and use the instrument.

The engine data available in a system depends on the type of engine used (see section 1-1). The gateway replaces any fuel flow sensors that might be plugged into the Navman instrument.

It is vital to read this document and the associated SmartCraft and Navman installation and operation manuals before installing or using the system.

## 1-1 SmartCraft data available from different engines

The SmartCraft engine data available in a system depends on the type of engine. SmartCraft is a digital engine network provided on some later model (2002 +) Mercury and Mariner Engines, both in-board and out-board.

	Engine type											
Engine data available	4 Stroke 30 - 60	V-6 EFI	Optimax 75- 115	Optimax 135-250	Optimax 225 DTS	Verado	Mer cruiser 4.3 L	Mer cruiser 5.0 L	Mer cruiser 5.7 L	Mer cruiser 6.2 L	Mer cruiser 8.1 L	496 HO
Steering Angle							✓	✓	✓	✓	✓	✓
Fuel level		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Oil temperature						✓						
Oil Pressure						✓	✓	✓	✓	✓	✓	✓
Engine Trim				✓	✓	✓	✓	✓	✓	✓	✓	✓
Water Pressure		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Engine temperature	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Flow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Level		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Engine voltage	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Pitot water (boat) speed	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
RPM	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

## 1-1-1 Tanks and sensors

Engines can have optional level sensors fitted:

- A two-stroke engine can have one sensor fitted to its oil tank, and one additional sensor fitted to a fuel, oil, water or waste tank.
- A four stroke engine can have one or two sensors fitted to its fuel, water or waste tanks.

If level sensors are fitted: the tank levels can be

displayed; there are alarms for low tank levels; the tanks must be set up and calibrated (see following sections:

FISH 4380 : Section 3-8-1

TRACKFISH 6600 : Section 4-7-1

FISH 4600 : Section 5-7-1

## 1-2 What comes with your gateway ?

Built-in cable to the Navman instrument, 1 m (3.3 ft) long

Built-in cable to the SmartCraft system, 300 mm (1 ft.) long

### SmartCraft Gateway

#### **Gateway LEDs:**

**NAV** (orange): Flashes fast when the gateway is exchanging data with the Navman instrument and the engine key is on.

**PWR** (green): On when power and the engine key are on.

**CAN** (red): Flashes fast when the gateway is exchanging data with the SmartCraft engine(s) and

#### **Also supplied:**

- Two mounting screws (8 gauge x 5/8 inch, Pan pozi, self tapping, stainless steel);
- warranty card;
- this manual.

Holes for mounting screws



## Optional extras for SmartCraft

### **Power/fuel splitter cable**

A power/fuel splitter cable ('Y' cable) is required for Navman instruments that do not have a separate fuel sensor connector (such as the FISH 4380, see section 2-2). This cable is included in hardware packages AA005022 and AA005023 and is also available separately from your Navman dealer.



AA002237

Also see Appendix-C

## 2 Installation

A system in a boat comprises:


- One or two SmartCraft capable petrol/gasoline engines; the data available depends on engine type and the sensors fitted (see section 1-1).
- A single or dual engine gateway.
- A SmartCraft capable Navman instrument, such as the FISH 4380, FISH 4600 or TRACK-FISH 6600.
- Other optional Navman instruments and SmartCraft displays. See Appendix-C

**⚠ Warning: Correct installation is critical to the performance of the unit. Before starting installation, it is vital to read this manual and the documentation that comes with the other parts. Then plan the installation and select where the equipment and cables will be located.**


**⚠ Warning: Ensure that any holes that you cut will not weaken the boat's structure. If in doubt, consult a qualified boat builder.**

### 2-1 Connecting the gateway to the SmartCraft system

**Using a Navman cable adaptor:** Use a Navman cable adaptor in a single engine system which does not have optional SmartCraft displays. However, a SmartCraft junction box should be used if future expansion of the SmartCraft system is planned.



**Using a SmartCraft junction box:** Connect the gateway to a SmartCraft Junction box in a twin engine system or in any system with optional SmartCraft displays.

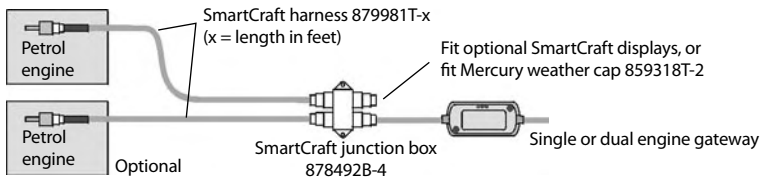


There must be two SmartCraft Terminators in any SmartCraft Installation. The Mercury harness 84-879982T-x has two terminators built-in; the Mercury harness 84-879981T-x has one terminator built-in. Terminators must be positioned at the furthest ends of the SmartCraft network.

Refer to a Mercury SmartCraft manual, such as *Wiring for SmartCraft Gauges* (Mercury part 90-879939), for details of installation configurations and requirements, alternative termination methods and additional SmartCraft components such as harnesses, junction boxes and terminators. Also see Appendix C


To use the SmartCraft functions, install the SmartCraft gateway (see section 2), then go to the System setup menu on the Navman Instrument and turn SmartCraft to On (See Setup > System menu).

## 2-2 Connecting the gateway to the Navman instrument


For a Navman instrument without a white fuel sensor connector (such as a FISH 4380):

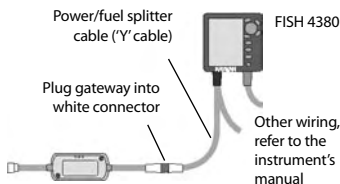

For a Navman instrument with a white fuel sensor connector (such as a FISH 4600 or TRACKFISH 6600):

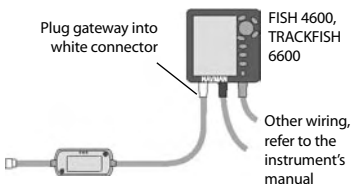

For any Navman instrument, using a NavBus junction box to connect to power/data cable (black power connector):

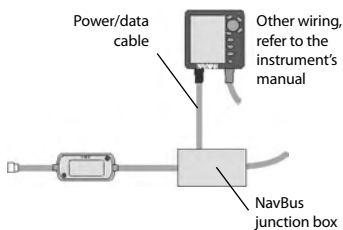

The wires from the gateway to the Navman instrument cable can be connected to the instrument's power/data cable. This option is not normally necessary. For more information, refer to your Navman dealer.

Cut white connector off gateway cable. Connect five gateway cable wires (red, black, blue, orange, brown) to the same colour wires in the power/data cable. An optional Navman NavBus junction box simplifies wiring.

## 2-3 Installation

- 1 Plan the installation: select where the equipment and wiring will be installed. Ensure that gateway can be located on a panel near the Navman instrument, where it will not interfere with the operation of the boat. (eg: cables are long enough for the installation planned)
- 2 Screw the gateway to the panel using the screws provided.
- 3 Connect the gateway (see sections 2-1 and 2-2). Secure the cables at regular intervals.
- 4 Power up, set up and test the system. Check the gateway LEDs:

**NAV** (orange): Flashes fast when gateway is exchanging data with the Navman instrument and the engine key is on.

**PWR** (green): On when power and the engine key are on.

**CAN** (red): Flashes fast when gateway is exchanging data with the SmartCraft engine(s) and the engine key is on.

### Important:

- 1 Do not connect any Navman fuel sensors to the Navman instrument.
- 2 It is not necessary to wire any Navman instrument for auto power on.
- 3 The Navman SmartCraft capable instrument sends SmartCraft data to other Navman instruments connected by NavBus. To connect other instruments by NavBus, see the instrument's installation and operation manual. Turn NavBus on in all Navman instruments connected by NavBus; for example, for a Fish 4380, in the **Comms** setup menu, turn **NavBus to On**.
- 4 A gateway does not provide data for system link gauges.
- 5 To use speed troll control, the Navman instrument must have a Navman paddlewheel speed sensor connected.

## 3 Operation with a Navman FISH 4380

Before a SmartCraft gateway is connected, the FISH 4380 functions normally, with no SmartCraft functions. When a SmartCraft gateway is connected and SmartCraft is turned On (see section 3-1), SmartCraft functions become available and some standard functions change.

### SmartCraft features

#### Data displays

Engine performance and tank level displays ..... See section 3-2

#### Troll control

Automatically maintains a set engine idle RPM or idle boat speed ..... See section 3-3

#### Trim indicator

Displays the trim angle when engine trim is adjusted ..... See section 3-4

#### Alarms

SmartCraft engine fault alarms ..... See section 3-5

Engine fault list, a list of active SmartCraft engine fault alarms ..... See section 3-6

Engine fault history, a list of past SmartCraft engine fault alarms ..... See section 3-6

Tank low level alarms ..... See section 3-2

#### Setup data and calibrations

SmartCraft setup data ..... See sections 3-1 and 3-7

SmartCraft calibrations, Tanks, Trim and Steering angle ..... See section 3-8

The SmartCraft data available depends on the engine type and the sensors fitted (see section 1-1). To disable the SmartCraft functions, turn SmartCraft to Off (see section 3-1); the instrument will now use any Navman fuel sensors which are connected.

To use the SmartCraft functions and not the sonar functions, turn Sonar to Off (see section 3-1).

### Changes to standard functions with SmartCraft

- **MENU key:** When using troll control, pressing **MENU** can display the troll window. Press **MENU** a second time to display the normal menu of options.

- **Fuel display:** The fuel display functions normally, with fuel and speed data coming from the SmartCraft system rather than from separate sensors connected to the FISH 4380.

- **Fuel setup options:**

If no fuel tanks have an optional level sensor fitted (see section 1-1-1), then the Smartcraft fuel flow is used to calculate fuel remaining. The fuel setup data is the same as the standard FISH 4380. You must tell the FISH 4380 when you add or remove fuel (see the *FISH 4380 Installation and Operation* manual).

If each fuel tank has an optional level sensor fitted (see section 1-1-1), then these tank levels are used to calculate fuel remaining. In the Fuel display, *Used* changes to *Trip used*, and the only fuel setup option is *Clear trip used*. *Trip used* measures the volume of fuel used until it is reset to zero by selecting *Clear trip used* in the fuel setup menu. You do not tell the FISH 4380 when you add or remove fuel.

- **Engine hours:** Engine hours on the Log display come from the SmartCraft system. It can not be reset.

- **Simulate mode:** Data from the SmartCraft engine(s) and sensors is simulated in Simulate mode. The SmartCraft features simulated will probably differ from the features available in your system.

For more information, see the *FISH 4380 Installation and Operation* manual.

## 3-1 Setting up the FISH 4380 for Smartcraft

These features can be used only when the optional single or twin engine SmartCraft Gateway has been installed.

Press **MENU** twice to display the Setup menu, then select SmartCraft.

Press **▶** to select On or Off

Note: NavBus will be turned on when SmartCraft is turned on.

### Sonar

Select:

**Off:** The sonar transducer and the sonar functions are disabled. Choose **Off** to use the instrument's SmartCraft functions only,


**On:** Normal sonar operation.

### SmartCraft

Select:

**Off:** The SmartCraft functions and NavBus are disabled. The instrument will now use any Navman fuel sensors which are connected.

**On:** Normal SmartCraft operation.

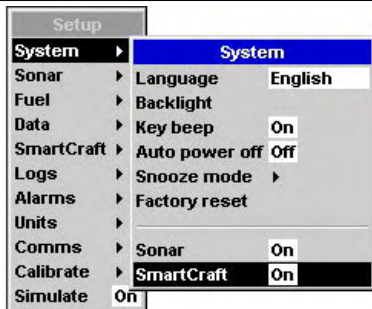


## 3-2 SmartCraft engine data displays

To display the SmartCraft data, press **MENU** and select SmartCraft, then press **>**, **+** or **-** or to select one of the four SmartCraft displays, shown below.

For the Small, Medium and Large gauges:


- The factory default has gauges appropriate to the type of engine. To change what gauges are displayed, see section 3-7: Gauge setup.
- If the boat has twin engines, the red needle

**Small:** Six small 'analogue' gauges:

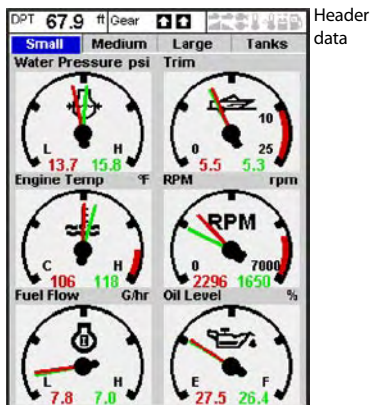

Header data

**Large:** Two large 'analogue' gauges

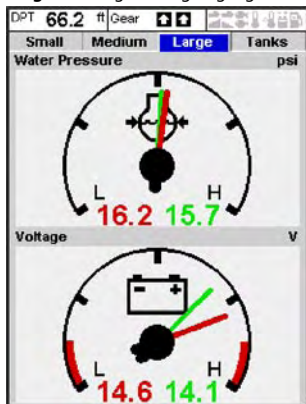


or number shows port data, green shows starboard data.


- The gauges can be set up to be analogue (dial) or digital (number) (see section 3-7: Gauge type and Speed range).

Each display has three items of header data. To select what data is displayed, see section 3-7: Header setup.

**Medium:** Two medium & two small 'analogue' gauges

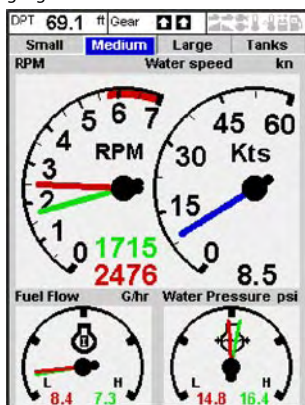

**Tanks:** Tank levels (see next page)

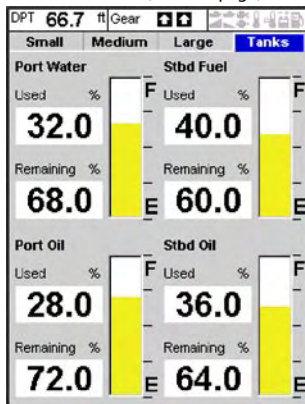

## Tank level display

The tank level display shows the levels from the optional level sensors in one or two tanks per engine (see section 1-1-1).

Note:

- Each tank must be set up and calibrated (see section 3-8-1).

## 3-3 Troll control

Troll control allows adjustment of the engine's idle speed from the Navman instrument. Troll control automatically controls the engine idle speed to maintain a set engine RPM or boat speed.

To use troll control, set *Troll* window to *On idle* or *Always* and set *Troll* mode to *Speed* or *RPM* (see section 3-7). To use speed troll control, set *Speed* type to *Paddle* (see section 3-7).

To prohibit troll control, set *Troll* window to *Never* (see section 3-7).

### Engaging troll control

- 1 Set the throttle(s) to idle and the engine(s) in gear. From a main display, press **MENU** to display the Troll control window (see right).
- 2 Press **▲** or **▼** to set the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **▶** to engage troll control. The FISH 4380 automatically controls RPM or speed. Or, press **◀** to leave troll control disengaged.

### Changing RPM or speed while troll control engaged

- 1 From a main display, press **MENU** to display the troll window.
- 2 Press **▲** or **▼** to change the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **◀**.


### Disengaging troll control

Either move the throttle from idle, or:

- 1 From a main display, press **MENU** to display the troll window.
- 2 Press **▶** to disengage troll control. Or, press **◀** to leave troll control engaged.



Note:

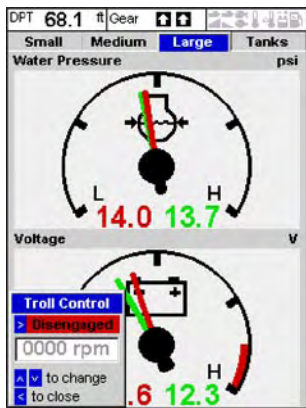- An alarm can be set to sound if the level in a tank is low (see section 3-8-1). These alarms are in addition to any SmartCraft engine fault low level alarms (see section 3-5).




- 1 The range of engine idle RPM adjustment available for both RPM and speed mode depends on engine type. Generally this is between 600 and 1000 RPM.
- 2 In speed troll control, the boat might not reach the desired speed if the maximum RPM available for troll control is too low or if conditions are bad.
- 3 Troll control is not available on some MerCruiser™ engines.


## 3-4 Trim indicator

When the engine trim is adjusted, a trim popup window can show the new trim angle. To see this window or not, set Trim popup to *On* or *Off* (see section 3-7). The window will automatically disappear after two seconds, or else press  or  to make the window disappear.

Before use, calibrate trim (see section 3-8-2).

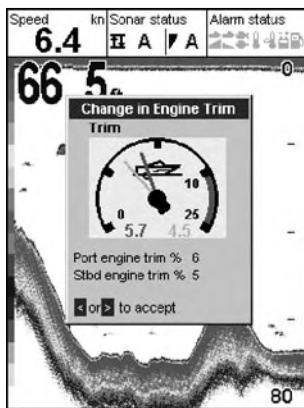

## 3-5 Engine fault alarms

There are many SmartCraft engine fault alarms. These alarms operate just like the other alarms in the Navman instrument; when the alarm sounds, press  to mute the alarm:

**Low reserve oil.**

**Low remote oil.**

**RPM over speed.**

**Low oil pressure.**

**High engine voltage.**

**Low engine voltage.**

A Navman instrument's low battery alarm measures the voltage the instrument; the above two alarms measure the voltage at the engine.

**Low block (water) pressure.**

**Engine overheat.**

**Low drive lube.**

(MerCruiser stern drive only).

**Water in fuel.**

**Engine Guardian™ active:** The Engine Guardian has detected a fault. The fault is displayed with the alarm.

**Engine communication lost:** The Navman instrument can not receive engine data from the SmartCraft gateway.

**Check engine:** There are many other engine fault alarms. When one of these alarms sounds, the alarm **Check engine** is displayed. For more information about the alarm, display the list of active alarms or the alarm history (see section 3-6).

### Notes:

- 1 For help when an SmartCraft alarm occurs, contact your Mercury dealer.
- 2 These SmartCraft alarms are always on. The alarm values are determined by the engine type.
- 3 A list of active faults and a fault history can be displayed (see section 3-6).

## 3-6 Engine fault lists

There are two lists of SmartCraft engine faults:

### 1 Engine faults list

A list of active engine fault alarms.

- To display the list, press **MENU** until the Setup menu is displayed, select Smart-Craft, then select Engine faults.

Engine faults	
Fault description	Fault Level
Fault details	
1) Guardian engine power limited Stbd engine limited to 0%	
2) Reserve oil level low Stbd engine 0% Remaining	
3) Reserve oil level low Port engine 0% Remaining	
4) Remote oil level low Port engine	
5) RPM over speed Port engine	
6) Engine voltage high Stbd engine	
7) Engine voltage low Port engine	
8) Oil pressure low Stbd engine	
9) Water pressure low Stbd engine	
to page up / down <b>ENT</b> for details	

### 2 Engine faults history

A list of nine recent engine fault alarms.

- To display the list, press **MENU** until the Setup menu is displayed, select SmartCraft, then select Engine fault history.

Engine fault history	
Fault description	Fault Level
Fault details	
1) None	
2) None	
3) None	
4) None	
5) None	
6) None	
7) None	
8) None	
9) None	
to page up / down  for details	

### When a faults list or history is displayed

- Press or to page up and down the list.
- To display more information about a particular fault:
  - Press or to select the fault.
  - Press to display the information.
  - Press or to return to the list.
- To exit the list, press .

To clear the engine fault history:

- From a main display, press **MENU** until the Setup menu is displayed.
- Select SmartCraft, then select Reset fault history.

Each engine fault has a priority:

- Red: Critical
- Orange: Severe
- Yellow: Warning
- Black: Caution
- Information

## 3-7 SmartCraft setup data

To go to the SmartCraft setup data, press **MENU** until the Setup menu is displayed, then select SmartCraft. The setup options are:

### Engine faults, Engine fault history, Reset fault history

See section 3-6.

### Troll window

Select from a menu:

**On idle:** Troll window is displayed when you press **MENU** and the throttle is at idle and the engine is in gear.

**Always:** Troll window is displayed when you press **MENU**.

**Never:** Troll window never displayed, troll control is not available.

### Troll mode

Press **▶** to select what troll mode controls:

**RPM:** Controls engine idle RPM.

**Speed:** Controls engine idle RPM to try to achieve the desired boat speed.

See section 3-3, notes 1 and 2

### Trim popup

Press **▶** to select:

**Off:** Trim popup window is never displayed.

**On:** Trim popup window is displayed when trim is changed.

### Trim popup filter

This filter can stop the trim popup window appearing because of engine vibration rather than a trim change.

Press **▶**, then press **▲** or **▼** to select a value, then press **▶**. The values are **Off** and 1 to 5.

Select **Off** or a low value first. Run the boat at a range of speeds and increase the value if vibration causes the trim popup window to appear. If the value is high, the trim window will appear slowly when trim changes.

### Speed range

Set the speed range for an analog speed gauge (see **Gauge type** below). The options are **High**, **Medium** and **Low**. A higher range displays a higher maximum speed but the display is more



compressed.

### Speed type

Press **▶** to select the source of the water (boat) speed reading:

**Pitot:** The engine's pitot sensor.

**Paddle:** A Navman paddlewheel sensor.

The pitot sensor is more accurate at high speeds but is not accurate at low speeds. The paddle wheel sensor is more accurate at low speeds. To use troll speed control, set **Speed type** to **Paddle**.

### Pitot type

Press **▶** to select 100 psi or 200psi to match the pitot type installed on the boat.

### Gauge type

Press **▶** to select the type of gauges in the Small, Medium and Large SmartCraft displays (see section 3-2):


**Analogue:** Dial displays (see also **Speed range** above).

**Digital:** Number displays.

## Gauge setup

Select what data is displayed in the gauges on the three SmartCraft gauge displays. Note that the factory default has gauges appropriate to the type of engine.


- 1 To select a gauge display. Press or until the display name (Small, Medium, Large or Tanks) turns blue.
- 2 Press or to select a gauge.
- 3 Change the gauge:
  - i Press to display a menu of options for the selected gauge (see right; the options available will depend on your engine, see section 1-1).
  - ii Press or to select an option, then press .
- 4 Repeat steps 1 to 3 to change more gauges, then press one or more times to return to the main display.

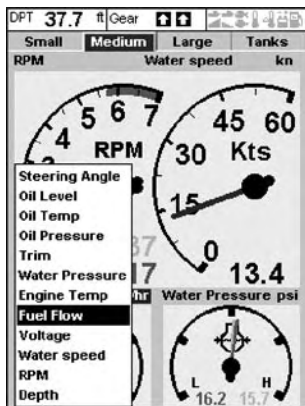

## Header setup

Select what data is displayed in the header data on the four SmartCraft displays. The display shows the header, with the selected data item highlighted.

- 1 Press or to select the header item to change.
- 2 Change the item:
  - i Press to display a menu of options for the selected item (see right; the options available will depend on your engine, see section 1-1).
  - ii Press or to select an option, then press .
- 3 Repeat steps 1 and 2 to change more header items, then press one or more times to return to the main display.

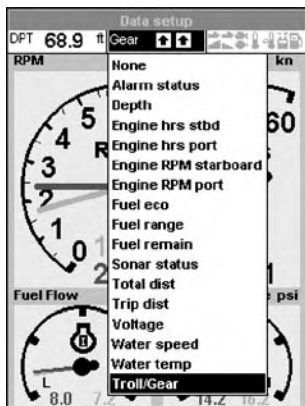


## 3-8 SmartCraft calibration

There are three SmartCraft calibrations.

### 3-8-1 Tanks calibration

If tanks have level sensors fitted (see section 1-1-1), set the type of tank, the tank alarms and calibrate if required:

Press **MENU** until the Setup menu is displayed, then select **Calibrate**, then select **Tanks**.

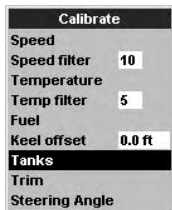

For each tank with a level sensor, follow the steps below:

- 1 Select **Tank**, press **▶** and select the tank from the menu.
- 2 Select **Tank type**, press **▶** and select the tank type from the menu (Unused, Fuel, Water, Oil or Waste).



- 3 The raw level sensor data is the level in the tank as a percentage of the level when the tank is full (100 %). To select how the level sensor data is displayed on the **Tanks** display (see section 3-2), select **Display type**, press **▶** and select the type from the menu:

**Percentage:** Display the raw level sensor data. Note:

- If the sides of the tank are not vertical and straight, then the **Percentage**

level sensor data displayed does not correspond to the volume in the tank; for example if the sensor shows 50 %, the tank is not 50 % full.

- For **Percentage** display type, fuel **Used** and **Remaining** on the **Fuel** display can not be calculated, and are displayed as **Invalid**.

**Volume:** Display a volume calculated linearly from the sensor data, for example if **Tank size** (see below) is 500 G and the sensor shows 50 % of full, then 250 G is displayed. Choose this option only if the tank has vertical, straight sides and the tank bottom and top are flat.

**Calibrated volume:** Display a volume calculated non linearly from the sensor data. Choose this option if the tank does not have vertical, straight sides. You must calibrate the tank (see step 6 below).


- 4 To set a low level alarm for the tank (see section 3-2):
  - i Select **Tank alarm**.
  - ii Press **▶** to turn the alarm **On** or **Off**.
  - iii Press **▲** or **▼** to set the alarm value. The alarm will sound if the alarm is **On** and the tank level is less than the alarm value.
  - iv Finally, press **◀**.
- 5 Set the tank size:
  - i Select **Tank size**.
  - ii Press **▲** or **▼** to set the tank size.
  - iii Finally, press **▶**.
- 6 If **Display type** is **Calibrated volume**, the sensor data must be calibrated.
  - i Select **Calibrate**.
  - ii Follow the instructions displayed to add measured amounts of fuel.
  - iii Finally, the display shows **Tank size** (set in step 5 above), **Actual size** (the volume of fuel you added to the tank), and asks **Is this correct?** Select:
    - **Accept** to accept the calibration

- Change to change Tank size if Tank size is not the same as Actual size.

### 3-8-2 Trim calibration

If the SmartCraft system has trim control, calibrate the trim angle display (see section 3-4):

- 1 Press **MENU** until the Setup menu is displayed, then select **Calibrate**, then select **Trim**.
- 2 Select **Installed** and press **>** to select **Yes**.
- 3 Select **Calibrate**. Follow the instructions displayed.

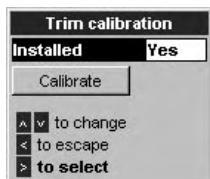


### 3-8-3 Steering angle calibration

If the SmartCraft system has a steering angle sensor, it must be calibrated.

- 1 There must be little wind and little current. Travel at a typical cruising speed.
- 2 Press **MENU** until the Setup menu is displayed, select **Calibrate**, then select **Steering angle**.

- 3 Steer the boat to port. If the display needle does not turn to port, select **Polarity** and press **>** to select the other polarity (Normal or Inverted).
- 4 Steer in a straight line, then select **Set center** to calibrate the steering angle.

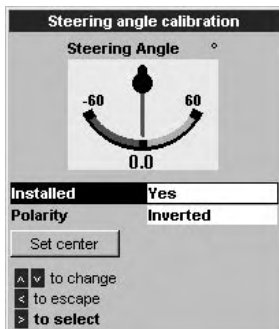

## 4 Operation with a Navman TRACKFISH 6600

Before a SmartCraft gateway is connected, the TRACKFISH 6600 functions normally, with no SmartCraft functions. When a SmartCraft gateway is connected and SmartCraft is turned On (see section 4-1), SmartCraft functions become available and some standard functions change.

### SmartCraft functions

#### Data displays

Engine performance and tank level displays ..... See section 4-2

#### Troll control

Automatically maintains a set engine idle RPM or idle boat speed ..... See section 4-3

#### Trim indicator

Displays the trim angle when engine trim is adjusted ..... See section 4-4

#### Alarms

Engine fault alarms ..... See section 4-5

Engine fault list, a list of active SmartCraft engine fault alarms ..... See section 4-6

Engine fault history, a list of past SmartCraft engine fault alarms ..... See section 4-6

Tank low level alarms ..... See section 4-2-1

#### Setup data and calibrations

SmartCraft setup data ..... See sections 4-1 and 4-2

SmartCraft calibrations, Tanks, Trim and Steering angle ..... See section 4-7

SmartCraft setup data and calibrations ..... See sections 4-7 and 4-1

The SmartCraft data available depends on the engine type and the sensors fitted (see section 1-1).

### Changes to standard functions with SmartCraft enabled:

- **MENU key:** When using troll control, pressing **MENU** can display the troll window. Press **MENU** a second time to display the normal menu.
- **Fuel:** The fuel display functions normally but with fuel and speed data coming from the SmartCraft system rather than from separate sensors connected to the TRACKFISH 6600.  
If there are no optional level sensor(s) fitted to the fuel tanks (see section 1-1-1), then the Smartcraft fuel flow is used to calculate fuel remaining. The fuel setup data is the same as the standard TRACKFISH 6600. You must tell the TRACKFISH 6600 when you add or remove fuel (see the *TRACKFISH 6600 Installation and Operation* manual).  
If each fuel tank has an optional level sensor fitted (see section 1-1-1), then these tank levels are used to calculate fuel remaining. In the Fuel display, **Used** changes to **Trip used**, and the only fuel setup option is **Clear trip used**. **Trip used** measures the volume of fuel used until it is reset to zero by selecting **Clear trip used** in the fuel setup menu. You do not tell the TRACKFISH 6600 when you add or remove fuel.
- **Engine hours:** Engine hours on the Log display come from the SmartCraft system. It can not be reset.
- **Simulate mode:** Data from the SmartCraft engine(s) and sensors is simulated. The SmartCraft data simulated will probably differ from the data available in your system.

For more information, see the *TRACKFISH 6600 Installation and Operation* manual.

## 4-1 Setting up the TRACKFISH 6600 for Smartcraft

There are two SmartCraft items in the TRACKFISH 6600 System setup menu. To display the System menu, press **MENU** until the Setup menu is displayed, then select **System**.

### Sonar

Select: For normal sonar operation

De-select: To disable the sonar transducer and sonar functions. For use with the instrument's SmartCraft functions only,

### SmartCraft

Select: Normal SmartCraft operation

De-select: SmartCraft functions. The instrument will now use any Navman fuel sensors which are connected.

### Note:

SmartCraft utilises NavBus comms. NavBus will turn on if SmartCraft is turned on.




## 4-2 SmartCraft engine data displays

There are four SmartCraft engine displays, shown below.


Note: If the boat has twin engines, two needles will appear on most of the gauge displays. The red needle or number shows port engine data, green shows starboard engine data.

Data header display area


Engine data display area

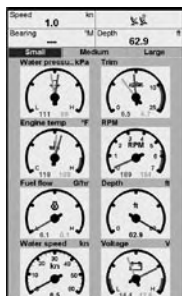


**Small:** Eight small gauges

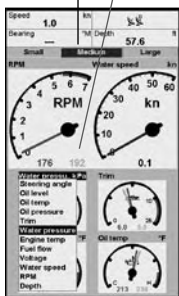

**Medium:** Two medium, four small gauges

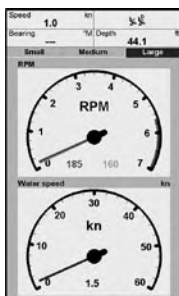

**Large:** Two large gauges

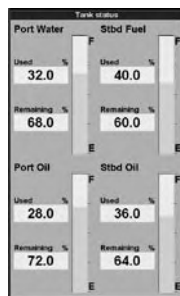

**Tanks:** Tank levels

**Diagnostics:** Shows eight small gauges. Press **DISPLAY**, select SmartCraft, then select Diagnostics.

**Cruising:** Shows two large and four small gauges. Press **DISPLAY**, select SmartCraft, then select Cruising.

**Engine data large:** Shows two large gauges. To display this, press **DISPLAY**, select SmartCraft, then select Engine data large.

**Tank status:** Shows the levels in the tanks. To display this, press **DISPLAY**, select SmartCraft, then select Tank status.

## 4-2-1 Tank status display


The tank level display shows the levels from the optional level sensors in one or two tanks per engine (see section 1-1-1).

Before use, each tank must be set up and calibrated (see section 4-7-1).

An alarm can be set to sound if the level in a tank is low (see section 4-7-1). These alarms are in addition to any SmartCraft engine fault low level alarms (see section 4-5).

## 4-2-2 Customising the engine data displays

To customise an engine data display, press **DISPLAY**, select **SmartCraft**, select the display to customise, and press **ENTER**. Press **MENU** to display the options:

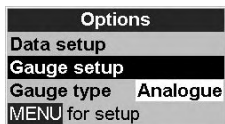


### Data setup

Select the data item to be displayed in the data header display area (at the top of the display):

- 1 Press **▲**, **▼**, **◀** or **▶** to select the data item to change.
- 2 Select the item by pressing **ENTER**. this will display a menu of options for the selected item (the options available will depend on your engine, see section 1-1).

Press **▲** or **▼** to select an option, then press **ENTER**.

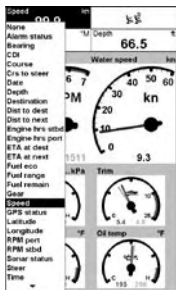


- 3 Repeat steps 1 and 2 to change more data items, then press **ESC** to return to the main display.

### Gauge setup

Select the data to be displayed in the engine data display areas (not for Tank status display).

- 1 Press **▲**, **▼**, **◀** or **▶** to select a gauge to change.
- 2 Change the gauge:
  - i Press **ENTER** to display a menu of options for the selected gauge (see right; the options available will depend on your engine, see section 1-1).
  - ii Press **▲** or **▼** to select an option, then press **ENTER**.

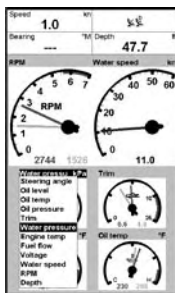

- 3 Repeat steps 1 to 2 to change more gauges, then press **ESC** to return to the main display.

### Gauge type

Select the type of gauges to be displayed (not for Tank status display):

**Analogue:** Dial type displays (see also section 4-7: Speed range).

**Digital:** Number type displays.

### Notes:

- 1 The factory default has gauges appropriate to the type of engine.
- 2 To further customise the three gauge displays, change **Speed range**, **Speed type** and **Pitot type** (see section 4-7).

## 4-3 Troll control

Troll control allows adjustment of the engine's idle speed from the Navman instrument. Troll control automatically controls the engine idle speed to maintain a set engine RPM or boat speed.

To use troll control, set Troll window to **On** idle or **Always** and set Troll mode to **Speed** or **RPM** (see section 4-7).

To use speed troll mode, set **Speed** type to **Paddle** (see section 4-7).

To prohibit troll control, set Troll window to **Never** (see section 4-7).

### Engaging troll control

- 1 Set the throttle(s) to idle and the engine(s) in gear. From a main display, press **MENU** to display the Troll control window (see right).
- 2 Press **▲** or **▼** to set the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **ENTER** to engage troll control. The TRACKFISH 6600 automatically controls RPM or speed. Or, press **ESC** to leave troll control disengaged.

### Changing RPM or speed while troll control engaged

- 1 From a main display, press **MENU** to display the troll window.
- 2 Press **▲** or **▼** to change the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **ESC**

### Disengaging troll control

Either move the throttle from idle, or:

- 1 From a main display, press **MENU** to display the troll window. Press **◀** or **▶** to select **Off** (Disengage) and press **ENTER**
- 2 Or, press **ESC** to leave troll control engaged.



### Notes:

- 1 The Troll range of engine idle RPM adjustment available for both RPM and speed mode depends on engine type. Generally this is between 600 and 1000 RPM.
- 2 In speed troll control, the boat might not reach the desired speed if the maximum RPM available for troll control is too low or if conditions are bad.
- 3 Troll can not engage unless engine throttle(s) are in idle, and engine(s) are in gear.
- 4 Troll control is not available on some Mer-Cruiser™ engines.
- 5 To use speed troll control, the Navman instrument must have a Navman paddlewheel speed sensor connected.

## 4-4 Trim indicator

When the optional engine trim is adjusted, a trim popup window can show the new trim angle. To see this window or not, set Trim popup to **On** or **Off** (see section 4-7: Trim). The window will auto-

matically disappear after two seconds, or else press **ESC** to close the window.

Before use, calibrate trim (see section 4-7: Trim).

## 4-5 Engine fault alarms

There are many SmartCraft engine fault alarms. These alarms operate just like the other alarms in the Navman instrument; when the alarm sounds, press **ESC** to mute the alarm:

**Low reserve oil.**

**Low remote oil.**

**RPM over speed.**

**Low oil pressure.**

**High engine voltage.**

**Low engine voltage.**

A Navman instrument's low battery alarm measures the voltage at the instrument; the above two alarms measure the voltage at the engine.

**Low block (water) pressure.**

**Engine overheat.**

**Low drive lube:** (MerCruiser stern drive only).

**Water in fuel.**

**Engine Guardian™ active:** The Engine

Guardian has detected a fault. The fault is displayed with the alarm.

**Engine communication lost:** The Navman instrument can not receive engine data from the SmartCraft gateway.

**Check engine:** There are many other engine fault alarms. When one of these alarms sounds, the alarm **Check engine** is displayed. For more information about the alarm, display the list of active alarms or the alarm history (see section 4-6).

### Notes:

- 1 For help when a SmartCraft alarm occurs, contact your Mercury dealer.
- 2 These SmartCraft alarms are always on. The alarm values are determined by the engine type.
- 3 A list of active faults and a fault history can be displayed (see section 4-6).

## 4-6 Engine fault lists

There are two lists of SmartCraft engine faults:

### 4-6-1 Engine faults list

To display a list of active engine fault alarms: press **DISPLAY**, select SmartCraft, then select Engine faults.

Engine faults	
Fault description Fault details	Fault Level
1) Guardian engine power limited Stbd engine limited to 0%	!
2) Reserve oil level low Stbd engine 0% Remaining	!
3) Reserve oil level low Port engine 0% Remaining	!
4) Remote oil level low Port engine	!
5) RPM over speed Port engine	!
6) Engine voltage high Stbd engine	!
7) Engine voltage low Port engine	!
8) Oil pressure low Stbd engine	!
9) Water pressure low Stbd engine	!
10) Engine overheating Stbd engine	!
11) Drive lube low Port engine	!
12) Water in fuel Stbd engine	!
13) Ignition fault Port engine EST 7 Short	!
14) Ignition fault Port engine EST 6 Short	!

↑ ↓ to page up / down **ENTER** for details

### When the faults list is displayed

- Press **+** or **-** to page up and down the list.
- To display more information about a particular fault:
  - i Press **▲** or **▼** to select the fault.
  - ii Press **ENTER** to display the information.
  - iii Press **ENTER** or **ESC** to return to the list.
- To exit the list, press **ESC**.

Each engine fault has a priority:

- ! Red: Critical
- ! Orange: Severe
- ! Yellow: Warning
- ! Black: Caution
- I Information

## 4-6-2 Engine fault history

To display a list of recent engine fault alarms, press **DISPLAY**, select SmartCraft, then select Engine fault history.

### When the Engine fault history is displayed

- Press **+** or **-** to page up and down the list.
- To display more information about a particular fault:
  - i Press **▲** or **▼** to select the fault.
  - ii Press **ENTER** to display the information.
  - iii Press **ENTER** or **ESC** to return to the list.
- To exit the list, press **ESC**.

### To clear the engine fault history:


Go to the engine fault history display, press **MENU** and select Reset fault history.

Engine fault history		
Fault description	Fault details	Fault Level
1) None		
2) None		
3) None		
4) None		
5) None		
6) None		
7) None		
8) None		
9) None		
10) None		
11) None		
12) None		
13) None		
14) None		

**▲** to page up / down **ENTER** for details

## 4-7 SmartCraft setup data and calibrations

To go to the SmartCraft setup data and calibrations, press **MENU** until the Setup menu is displayed, then select SmartCraft.

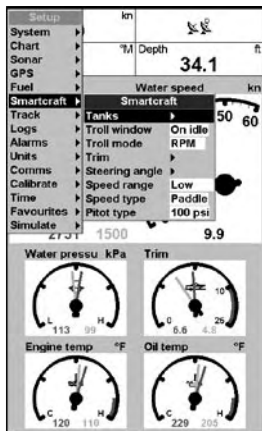

### Note:

If there is more than one SmartCraft capable Navman instrument in a system, some setup data may be different in each instrument.

The setup and calibration options are:

### Tanks

Set up and calibrate the tanks (see section 4-7-1).

### Troll window

Select from a menu:

**On idle:** Troll window is displayed when you press **MENU** and the throttle is at idle and the engine is in gear.

**Always:** Troll window is displayed when you press **MENU**.

**Never:** Troll window never displayed, troll control is not available.

### Troll mode

Select what troll mode controls:

**RPM:** Controls engine idle RPM.

**Speed:** Controls engine idle RPM to try to achieve the desired boat speed.

See section 4-3, notes 1 and 2

### Trim

Set up and calibrate the trim display (see section 4-7-2).

## Steering angle

Set up and calibrate the steering angle (see section 4-7-3).

## Speed range

Set the speed range for an analog speed gauge. The options are *High*, *Medium* and *Low*. A higher range displays a higher maximum speed but the display is more compressed.

## Speed type

Select the source of the water (boat) speed reading:

**Pitot:** The engine's pitot sensor.

**Paddle:** A Navman paddlewheel sensor.

The pitot sensor is more accurate at high speeds but is not accurate at low speeds. The paddlewheel sensor is more accurate at low speeds. To use troll speed control, set *Speed type* to *Paddle*.

## Pitot type

Press to select 100 psi or 200psi to match the pitot type installed on the boat.

## 4-7-1 Tanks setup and calibration

Set up and calibrate tanks with level sensors fitted (see section 1-1-1):

- 1 Press until the Setup menu is displayed, select *SmartCraft*, then select *Tanks*.
- 2 For each tank in the boat, select *Tank*, select

Tanks	
Tank	Starboard tank 1
Tank type	Fuel
Display type	Percentage
Tank alarm	Off
Tank size	5 G
Calibrate	
Reset calibration	

the tank to set up, then set up and calibrate the tank.

### Note:

The displayed Tank size unit uses the setting selected in the Navman instrument. To change to a different unit type, use the Setup > Units menu in the Navman instrument.

For each tank, the options are:

## Tank type

Select the tank type (*Unused*, *Fuel*, *Water*, *Oil* or *Waste*).

## Display type

The data from the level sensor in each tank is the depth in the tank as a percentage of the depth when the tank is full. If the sides of the tank are not vertical and straight, or if the tank top and bottom are not flat, then the level sensor data does not correspond to the volume in the tank; for example if the sensor shows 50 %, the tank is not 50 % full.

The *Display type* option selects how the level sensor data is displayed:

**Percentage:** Display the percentage level sensor data. The default is the percentage level sensor data. If the tank is calibrated, then a calibrated percentage is displayed.

**Volume:** Display a volume calculated from the sensor data. The default is a linear calculation, for example if the tank holds 500 G and the sensor shows 50 % of full, then 250 G is displayed. This is correct if the sides of the tank are vertical and straight and the tank top and bottom are flat. If this is not so, calibrate the tank (see *Calibrate* below).

## Tank size

Set the tank size:

- i Set the tank size: press or to select a digit, then press or to change the digit.
- ii Press .

## Tank alarm

To set a low level alarm for the tank:


- i Set the alarm value: press or to select a digit, then press or to change the digit. To turn the alarm off, set the alarm value to 0. If the alarm value is greater than zero, the alarm will sound if the tank level is less than the alarm value.
- ii Press .

## Calibrate

Calibrate the tank readings if the sides of the tank are not vertical and straight, or if the tank top and bottom are not flat. The following procedure requires the tank to be filled from empty. The

Tank Calibration screen will display an amount of fuel to add to the tank - select **OK** each time the measured amount is added. This will happen a number of times.


- i Enter the tank size (volume).
- ii Follow the on-screen instructions displayed to add measured amounts of fuel. Select **OK** each time the measured amount is added.
- iii The display shows Tank calibration - Tank profile and asks Is this correct?.

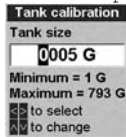


rect?.

Select:

- **OK** to accept the calibration
- **Cancel** to cancel.

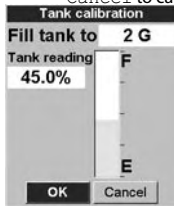

- iv. If the actual tank size did not match that in step (i), then change the tank size from the menu.

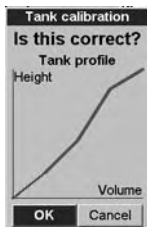

## Reset calibration

Reset the tank calibration to the default - the displayed volume is calculated linearly from the sensor data (see Display type above). Any tank calibration data will be lost.


## 4-7-2 Trim setup and calibration

Set up and calibrate a SmartCraft trim control (see section 4-4). Press **MENU** until the Setup menu is displayed, then select **SmartCraft**, then select **Trim**. The options are:

### Installed

Select: Trim sensors are installed in the engine(s).

De-select: No trim sensors installed in the engine(s).



### Trim popup

Select: Trim sensors are installed in the engine(s).

De-select: Trim popup window is never displayed.

### Trim popup filter

This filter can stop the trim popup window appearing because of engine vibration rather than a trim change.

Press **ENTER**, then press **▲** or **▼** to select a value, then press **ENTER**. The values are *Off* and 1 to 5.

Select *Off* or a low value first. Run the boat at a range of speeds and increase the value if vibration causes the trim popup window to appear. If the value is high, the trim window will appear slowly when trim changes.

### Calibrate

Follow the on-screen instructions displayed to calibrate the displayed trim angle, and press **ENTER** as required.


## 4-7-3 Steering angle setup and calibration

Set up and calibrate the SmartCraft steering angle display. Press **MENU** until the Setup menu is displayed, then select **SmartCraft**, then select **Steering angle**. The options are:

### Installed

Select: Steering angle sensor installed.

De-select: No steering angle sensor installed.



### Polarity

Steer the boat to port. If the steering angle pointer does not move to port, choose the other polarity (Normal or Inverted).

### Calibrate

- 1 There must be little wind and little current. Travel at a typical cruising speed.
- 2 Steer in a straight line, then select **Calibrate** to calibrate the steering angle.



- 3 Press enter when steering in a straight line.

## 5 Operation with a Navman FISH 4600

Before a SmartCraft gateway is connected, the FISH 4600 functions normally, with no SmartCraft functions. When a SmartCraft gateway is connected and SmartCraft is turned On (see section 5-1), SmartCraft functions become available and some standard functions change.

### SmartCraft functions

#### Data displays

Engine performance and tank level displays ..... See section 5-2

#### Troll control

Automatically maintains a set engine idle RPM or idle boat speed ..... See section 5-3

#### Trim indicator

Displays the trim angle when engine trim is adjusted ..... See section 5-4

#### Alarms

SmartCraft engine fault alarms ..... See section 5-5

Engine fault list, a list of active SmartCraft engine fault alarms ..... See section 5-6

Engine fault history, a list of past SmartCraft engine fault alarms ..... See section 5-6

Tank low level alarms ..... See section 5-2-1

#### Setup data and calibrations

SmartCraft setup data ..... See sections 5-6 and 5-8

SmartCraft calibrations, Tanks, Trim and Steering angle ..... See section 5-7

SmartCraft setup data and calibrations ..... See sections 5-7 and 5-1

The SmartCraft data available depends on the engine type and the sensors fitted (see section 1-1).

### Changes to standard functions with SmartCraft enabled:

- **MENU key:** When using troll control, pressing **MENU** can display the troll window. Press **MENU** a second time to display the normal menu.

- **Fuel:** The fuel display functions normally but with fuel and speed data coming from the SmartCraft system rather than from separate sensors connected to the FISH 4600.

If there are no optional level sensor(s) fitted to the fuel tanks (see section 1-1-1), then the Smartcraft fuel flow is used to calculate fuel remaining. The fuel setup data is the same as the standard FISH 4600. You must tell the FISH 4600 when you add or remove fuel (see the *FISH 4500/4600 Installation and Operation* manual).

If each fuel tank has an optional level sensor fitted (see section 1-1-1), then these tank levels are used to calculate fuel remaining. In the Fuel display, *Used* changes to *Trip used*, and the only fuel setup option is *Clear trip used*. *Trip used* measures the volume of fuel used until it is reset to zero by selecting *Clear trip used* in the fuel setup menu. You do not tell the FISH 4600 when you add or remove fuel.

- **Engine hours:** Engine hours on the Log display come from the SmartCraft system. It can not be reset.
- **Simulate mode:** Data from the SmartCraft engine(s) and sensors is simulated. The SmartCraft data simulated will probably differ from the data available in your system.

For more information, see the *FISH 4500/4600 Installation and Operation* manual.

## 5-1 Setting up the FISH 4600 for Smartcraft

There are two SmartCraft items in the FISH 4600 System setup menu. To display the System menu, press **MENU** until the Setup menu is displayed, then select **System**.

### Sonar

Select: For normal sonar operation

De-select: To disable the sonar transducer and sonar functions. For use with the instrument's SmartCraft functions only,


### SmartCraft

Select: Normal SmartCraft operation

De-select: SmartCraft functions. The instrument will now use any Navman fuel sensors which are connected.

### Note:

SmartCraft utilises NavBus comms. NavBus will turn on if SmartCraft is turned on.

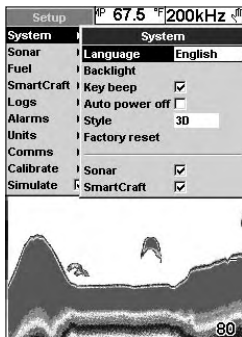


## 5-2 SmartCraft engine data displays

There are four SmartCraft engine displays, shown below.

**Note:** If the boat has twin engines, two needles will appear on most of the gauge displays. The red needle or number shows port engine data, green shows starboard engine data.


Engine data display area

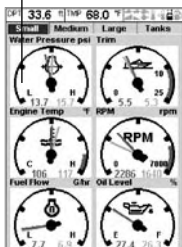

**Small:** Eight small gauges


Shows eight small gauges. Press **DISP**, select SmartCraft, then select Small.

Data header display area

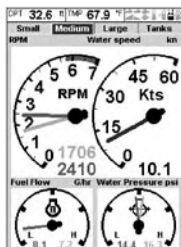


**Medium:** Two medium, four small gauges

Shows two large and four small gauges. Press **DISP**, select SmartCraft, then select Medium.

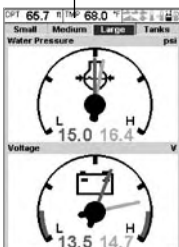

**Large:** Two large gauges

Shows two large gauges. To display this, press **DISP**, select SmartCraft, then select Large.

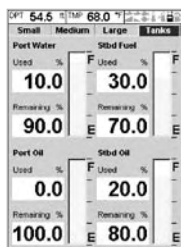

**Tanks:** Tank levels

Shows the levels in the tanks. To display this, press **DISP**, select SmartCraft, then select Tanks.

## 5-2-1 Tank status display


The tank level display shows the levels from the optional level sensors in one or two tanks per engine (see section 1-1-1).

Before use, each tank must be set up and calibrated (see section 5-7-1).

An alarm can be set to sound if the level in a tank is low (see section 5-7-1). These alarms are in addition to any SmartCraft engine fault low level alarms (see section 5-5).

## 5-2-2 Customising the engine data displays

To customise an engine data display, press **DISP**, select SmartCraft, select the display to customise. Press **MENU** to display the available options; Gauge type, Gauge setup, and Header setup, then press **ENT**.

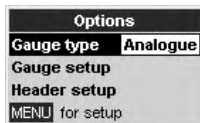

### Gauge type

Select the type of gauges to be displayed (not for Tank status display):

**Analogue:** Dial type displays (see also section 5-7: Speed range).

**Digital:** Number type displays.

### Notes:


- 1 The factory default has gauges appropriate to the type of engine.
- 2 To further customise the three gauge displays, change Speed range, Speed type and Pitot type (see section 5-7)

### Gauge setup

Select the data to be displayed in the engine data display areas (not for Tank status display).

- 1 Press **▲**, **▼**, **◀** or **▶** to select a gauge to change.
- 2 Change the gauge:
  - i Press **ENT** to display a menu of options for the selected gauge (see above; the options available will depend on your engine, see section 1-1).


- ii Press **▲** or **▼** to select an option, then press **ENT**.
- 3 Repeat steps 1 to 2 to change more gauges, then press **ENT** to return to the main display.

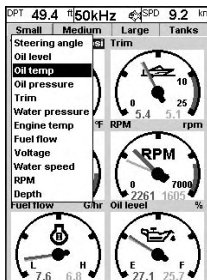

### Header setup

Select the data item to be displayed in the data header display area (at the top of the display):

- 1 Press **▲**, **▼**, **◀** or **▶** to select the data item to change.
- 2 Select the item by pressing **ENT**. This will display a menu of options for the selected item (the options available will depend on your engine, see section 1-1).  
Press **▲** or **▼** to select an option, then press **ENT**.
- 3 Repeat steps 1 and 2 to change more data items, then press **ESC** to return to the main display.

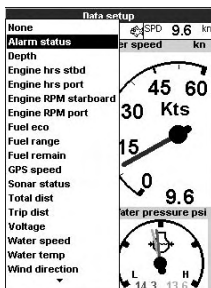

## 5-3 Troll control

Troll control allows adjustment of the engine's idle speed from the Navman instrument. Troll control automatically controls the engine idle speed to maintain a set engine RPM or boat speed.

To use troll control, set Troll window to **On idle** or **Always** and set Troll mode to **Speed** or **RPM** (see section 5-7).

To use speed troll mode, set **Speed type** to **Paddle** (see section 5-7).

To prohibit troll control, set **Troll window** to **Never** (see section 5-7).

### Engaging troll control

- 1 Set the throttle(s) to idle and the engine(s) in gear. From a main display, press **MENU** to display the Troll control window (see right).
- 2 Press **▲** or **▼** to set the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **ENT** to engage troll control. The FISH 4600 automatically controls RPM or speed. Or, press **ESC** to leave troll control disengaged.

### Changing RPM or speed while troll control engaged

- 1 From a main display, press **MENU** to display the troll window.
- 2 Press **▲** or **▼** to change the desired RPM or boat speed (see notes 1 and 2).
- 3 Press **ESC**

### Disengaging troll control

Either move the throttle from idle, or:

- 1 From a main display, press **MENU** to display the troll window. Press **◀** or **▶** to select **Off (Disengage)** and press **ENT**
- 2 Or, press **ESC** to leave troll control engaged.



### Notes:

- 1 The Troll range of engine idle RPM adjustment available for both RPM and speed mode depends on engine type. Generally this is between 600 and 1000 RPM.
- 2 In speed troll control, the boat might not reach the desired speed if the maximum RPM available for troll control is too low or if conditions are bad.
- 3 Troll can not engage unless engine throttle(s) are in idle, and engine(s) are in gear.
- 4 Troll control is not available on some Mer-Cruiser™ engines.
- 5 To use speed troll control, the Navman instrument must have a Navman paddlewheel speed sensor connected.

## 5-4 Trim indicator

When the optional engine trim is adjusted, a trim popup window can show the new trim angle. To see this window or not, set Trim popup to **On** or **Off** (see section 5-7: Trim). The window will automatically disappear after two seconds, or else press

**ESC** to close the window.

Before use, calibrate trim (see section 5-7: Trim).

## 5-5 Engine fault alarms

There are many SmartCraft engine fault alarms. These alarms operate just like the other alarms in the Navman instrument; when the alarm sounds, press **ESC** to mute the alarm:

- Low reserve oil.**
- Low remote oil.**
- RPM over speed.**
- Low oil pressure.**
- High engine voltage.**
- Low engine voltage.**

A Navman instrument's low battery alarm measures the voltage at the instrument; the above two alarms measure the voltage at the engine.

- Low block (water) pressure.**
- Engine overheat.**
- Low drive lube** (MerCruiser stern drive only).
- Water in fuel.**
- Engine Guardian™ active:** The Engine

Guardian has detected a fault. The fault is displayed with the alarm.

**Engine communication lost:** The Navman instrument can not receive engine data from the SmartCraft gateway.

**Check engine:** There are many other engine fault alarms. When one of these alarms sounds, the alarm **Check engine** is displayed. For more information about the alarm, display the list of active alarms or the alarm history (see section 5-6).

### Notes:

- 1 For help when a SmartCraft alarm occurs, contact your Mercury dealer.
- 2 These SmartCraft alarms are always on. The alarm values are determined by the engine type.
- 3 A list of active faults and a fault history can be displayed (see section 5-6).

## 5-6 Engine fault lists

There are two lists of SmartCraft engine faults:

### 5-6-1 Engine faults list

To display a list of active engine fault alarms: press **DISP**, select SmartCraft, then select Engine faults.

Engine faults	
Fault description	Fault Level
Fault details	
10) Engine overheating Stbd engine	
11) Drive lube low Port engine	
12) Water in fuel Stbd engine	
13) Ignition fault Port engine EST 7 Short	
14) Ignition fault Port engine EST 6 Short	
15) Fuel injector fault Port engine Injector 7 Short	
16) Air injector fault Port engine Air injector 7 Open	
17) Air injector fault Port engine Air injector 7 Short	
18) Knock sensor fault Stbd engine	

to page up / down for details

### When the faults list is displayed

- Press **+** or **-** to page up and down the list.
- To display more information about a particular fault:
  - i Press **▲** or **▼** to select the fault.
  - ii Press **ENT** to display the information.
  - iii Press **ENT** or **ESC** to return to the list.
- To exit the list, press **ESC**.

Each engine fault has a priority:

- Red: Critical
- Orange: Severe
- Yellow: Warning
- Black: Caution
- Information

## 5-6-2 Engine fault history

To display a list of recent engine fault alarms, press **DISPLAY**, select SmartCraft, then select Engine fault history.

### When the Engine fault history is displayed

- Press **+** or **-** to page up and down the list.
- To display more information about a particular fault:
  - i Press **▲** or **▼** to select the fault.
  - ii Press **ENT** to display the information.
  - iii Press **ENT** or **ESC** to return to the list.
- To exit the list, press **ESC**.


### To clear the engine fault history:

Go to the engine fault history display, press **MENU** and select Reset fault history.

Engine fault history	
Fault description	Fault Level
1) None	
2) None	
3) None	
4) None	
5) None	
6) None	
7) None	
8) None	
9) None	
+ to page up / down ENT for details	

## 5-7 SmartCraft setup data and calibrations

To go to the SmartCraft setup data and calibrations, press **MENU** until the Setup menu is displayed, then select SmartCraft.

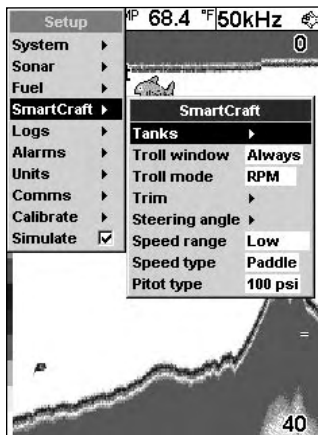

### Note:

If there is more than one SmartCraft capable Navman instrument in a system, some setup data may be different in each instrument.

The setup and calibration options are:

### Tanks

Set up and calibrate the tanks (see section 5-7-1).

### Troll window

Select from a menu:

**On idle:** Troll window is displayed when you press **MENU** and the throttle is at idle and the engine is in gear.

**Always:** Troll window is displayed when you press **MENU**.

**Never:** Troll window never displayed, troll control is not available.

### Troll mode

Select what troll mode controls:

**RPM:** Controls engine idle RPM.

**Speed:** Controls engine idle RPM to try to achieve the desired boat speed.

See section 5-3, notes 1 and 2

### Trim

Set up and calibrate the trim display (see section 5-7-2).

## Steering angle

Set up and calibrate the steering angle (see section 5-7-3).

## Speed range

Set the speed range for an analog speed gauge. The options are *High*, *Medium* and *Low*. A higher range displays a higher maximum speed but the display is more compressed.

## Speed type


Select the source of the water (boat) speed reading:

**Pitot:** The engine's pitot sensor.

**Paddle:** A Navman paddlewheel sensor.


The pitot sensor is more accurate at high speeds but is not accurate at low speeds. The paddlewheel sensor is more accurate at low speeds. To use trol speed control, set *Speed type* to *Paddle*.

## Pitot type

Press  to select *100 psi* or *200psi* to match the pitot type installed on the boat.

## 5-7-1 Tanks setup and calibration

Set up and calibrate tanks with level sensors fitted (see section 1-1-1):

- 1 Press  until the Setup menu is displayed, select *SmartCraft*, then select *Tanks*.

Tanks	
Tank	Starboard tank 1
Tank type	Fuel
Display type	Percentage
Tank alarm	Off
Tank size	5 G
Calibrate	
Reset calibration	

- 2 For each tank in the boat, select *Tank*, select the tank to set up, then set up and calibrate the tank.

### Note:

The displayed Tank size unit uses the setting selected in the Navman instrument. To change to a different unit type, use the Setup > Units menu in the Navman instrument.

For each tank, the options are:

## Tank type

Select the tank type (*Unused*, *Fuel*, *Water*, *Oil* or *Waste*).

## Display type

The data from the level sensor in each tank is the depth in the tank as a percentage of the depth when the tank is full. If the sides of the tank are not vertical and straight, or if the tank top and bottom are not flat, then the level sensor data does not correspond to the volume in the tank; for example if the sensor shows 50 %, the tank is not 50 % full.






The *Display type* option selects how the level sensor data is displayed:

**Percentage:** Display the percentage level sensor data. The default is the percentage level sensor data. If the tank is calibrated, then a calibrated percentage is displayed.

**Volume:** Display a volume calculated from the sensor data. The default is a linear calculation, for example if the tank holds 500 G and the sensor shows 50 % of full, then 250 G is displayed. This is correct if the sides of the tank are vertical and straight and the tank top and bottom are flat. If this is not so, calibrate the tank (see *Calibrate* below).






## Tank size

Set the tank size:

- i Set the tank size: press  or  to select a digit, then press  or  to change the digit.
- ii Press .

## Tank alarm

To set a low level alarm for the tank:

- i Set the alarm value: press  or  to select a digit, then press  or  to change the digit. To turn the alarm off, set the alarm value to 0. If the alarm value is greater than zero, the alarm will sound if the tank level is less than the alarm value.
- ii Press .


## Calibrate

Calibrate the tank readings if the sides of the tank are not vertical and straight, or if the tank top and bottom are not flat. The following procedure requires the tank to be filled from empty. The Tank Calibration screen will display an amount of fuel to add to the tank - select **OK** each time the measured amount is added. This will happen a number of times.

- i Enter the tank size (volume).



- ii Follow the on-screen instructions displayed to add measured amounts of fuel. Select **OK** each time the measured amount is added.
- iii The display shows **Tank calibration**

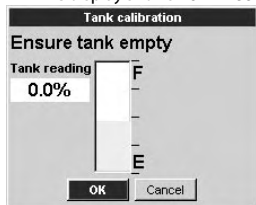

- Tank profile and asks **Is this correct?**

Select:



- **OK** to accept the calibration
  - **Cancel** to cancel.
- iv. If the actual tank size did not match that in step (i), then change the tank size from the menu.

## Reset calibration

Reset the tank calibration to the default - the displayed volume is calculated linearly from the sensor data (see Display type above). Any tank calibration data will be lost.

## 5-7-2 Trim setup and calibration

Set up and calibrate a SmartCraft trim control (see section 5-4). Press **MENU** until the Setup menu is displayed, then select **SmartCraft**, then select **Trim**. The options are:



### Installed

Select: Trim sensors are installed in the engine(s).

De-select: No trim sensors installed in the engine(s).

### Trim popup

Select: Trim sensors are installed in the engine(s).

De-select: Trim popup window is never displayed.

### Trim popup filter

This filter can stop the trim popup window appearing because of engine vibration rather than a trim change.

Press **ENT**, then press **▲** or **▼** to select a value, then press **ENT**. The values are **Off** and **1** to **5**.

Select **Off** or a low value first. Run the boat at a range of speeds and increase the value if vibration causes the trim popup window to appear. If the value is high, the trim window will appear slowly when trim changes.

### Calibrate

Follow the on-screen instructions displayed to calibrate the displayed trim angle, and press **ENT** as required.

## 5-7-3 Steering angle setup and calibration



Set up and calibrate the SmartCraft steering angle display. Press **MENU** until the Setup menu is displayed, then select SmartCraft, then select Steering angle. The options are:

### Installed

Select: Steering angle sensor installed.


De-select: No steering angle sensor installed.

### Polarity

Steer the boat to port. If the steering angle pointer does not move to port, choose the other polarity (Normal or Inverted).

### Calibrate

- 1 There must be little wind and little current. Travel at a typical cruising speed.
- 2 Steer in a straight line, then select Calibrate to calibrate the steering angle.

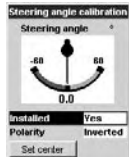

- 3 Press enter when steering in a straight line.

## Appendix A - Specifications

### Physical

- Size 130 x 62 x 26 mm (5.1 x 2.4 x 1.0 in).
- Operating temperature 0 to 50°C (32 to 122°F).
- Built-in cable to the Navman instrument, 1 m (3.3 ft) long.
- Built-in cable to SmartCraft and engine, 300 mm (1 ft) long.

### Electrical

- Power supply 9.0 to 30 V DC, 50 mA.

### Interfaces

- NavBus connection to Navman instruments.
- CAN bus connection to SmartCraft system.

### Standards compliance

- **EMC compliance**

**USA (FCC):** Part 15 Class B.

**Europe (CE):** EN50081-1, EN50082-1, EN55024, EN55022, ISO7637-1.

**New Zealand and Australia (C Tick):** AS-NZS 3548.

### Cable to Navman instrument

Wire	Signal
Red	Power positive, 9 to 30 V DC, 50 mA
Black	Power negative
Brown	Power positive from instrument
Orange	NavBus +
Blue	NavBus -
Green	No connection
Yellow	No connection
White	No Connection

## Appendix B - Troubleshooting

### 1 No SmartCraft functions available or SmartCraft data is zero or is not displayed

- a Boat engine key is off.
- b Review installation; check the gateway LEDs are working (see section 2)
- c SmartCraft is disabled in the Navman Instrument. See Setup > System menu.

### 2 Some SmartCraft data is not available:

The data available depends on engine type (see section 1-1).

### 3 Can not start troll control:












- a Some MerCruiser engines do not support troll control.
- b Set engine to idle and in gear (see section Troll Control).
- c Set `Speed type` to `Paddle` (see section Troll Control).
- d To use speed troll control, the Navman instru-

ment must have a Navman paddlewheel speed sensor connected.

### 4 Trim window is slow to appear, or appears when trim does not change:

Change the trim filter (see section Trim Setup and Calibration).

## Appendix C - Mercury SmartCraft accessories

		
<p><b>859318T1</b> Termination resistor</p>	<p><b>892452A01</b> SmartCraft cable adaptor (male/male)</p>	<p><b>892453A01</b> SmartCraft cable adaptor (female/female)</p>
		
<p><b>8784924</b> SmartCraft junction box - 4 way</p>	<p><b>8784926</b> SmartCraft junction box - 6 way</p>	<p><b>8784928</b> SmartCraft junction box - 8 way</p>
		
<p><b>879968T</b> (6, 10, 15, 20, 30) SmartCraft wiring harness</p>	<p><b>879981T</b> (10, 15, 20, 30) SmartCraft wiring harness with 1 terminator</p>	<p><b>879982T</b> (20, 30) SmartCraft wiring harness with 2 terminators</p>
		
<p><b>859743T2</b> SmartCraft accessory harness (fuel/oil)</p>	<p><b>859318T2</b> SmartCraft weather cap</p>	

**NORTH AMERICA**

BNT - Marine Electronics  
30 Sudbury Rd, Acton, MA 01720.  
Toll Free: +1 866 628 6261  
Fax: +1 978 897 8264  
e-mail: sales@navmanusa.com  
web: www.navman.com

**OCEANIA****Australia**

Navman Australia Pty. Limited  
Suite 2, 408 Victoria Road  
Gladesville NSW 2111, Australia.  
Ph: +61 2 9879 9000  
Fax: +61 2 9879 9001  
e-mail: sales@navman.com.au  
web: www.navman.com

**New Zealand**

Absolute Marine Ltd.  
Unit B, 138 Harris Road,  
East Tamaki, Auckland.  
Ph: +64 9 273 9273  
Fax: +64 9 273 9099  
e-mail: navman@absolutemarine.co.nz

**Papua New Guinea**

Lohberger Engineering,  
Lawes Road, Konedobu.  
PO Box 810, Port Moresby.  
Ph: +675 321 2122  
Fax: +675 321 2704  
e-mail: lohberg@online.net.pg  
web: www.lohberger.com.pg

**LATIN AMERICA****Argentina**

Costanera Uno S.A.  
Av Pte Ramón S. Castillo y Calle 13  
Zip 1425 Buenos Aires, Argentina.  
Ph: +54 11 4312 4545  
Fax: +54 11 4312 5258  
e-mail:  
purchase@costanerauno.com.ar  
web: www.costanerauno.ar

**Brazil**

Equinautic Com Imp Exp de Equip  
Nauticos Ltda.  
Rua Ernesto Paiva, 139  
Clube dos Jangadeiros  
Porto Alegre - RS - Brasil  
CEP: 91900-200.  
Ph: +55 51 3268 6675  
+55 51 3269 2975  
Fax: +55 51 3268 1034  
e-mail:  
equinautic@equinautic.com.br  
web: www.equinautic.com.br

**Realmarine**

Estrada do Joa 3862,  
Barra da Tijuca, Rio de Janeiro, Brazil.  
CEP: 22611-020.  
Ph: +55 21 2483 9700  
Fax: +55 21 2495 6823  
e-mail: titi@realmarine.com.br  
web: www.realmarine.com.br

**Chile**

Equipmar  
Manuel Rodriguez 27  
Santiago, Chile.  
Ph: +56 2 698 0055  
Fax: +56 2 698 3765  
e-mail: mmontecinos@equipmar.cl  
Mera Vennik  
Colon 1148, Talcahuano,  
4262798, Chile.  
Ph: +56 41 541 752  
Fax: +56 41 543 489  
e-mail: meravennik@entel.chile.net

**Mexico**

Mercury Marine de Mexico  
Anastasio Bustamante #76  
Interior 6 Colonia Francisco Zarabia,  
Zapapan, Jalisco, C.P. 45236 Mexico.  
Ph: +52 33 3283 1030  
Fax: +52 33 3283 1034  
web: www.equinautic.com.br

**Uruguay**

Alvaro Bermudez, Nautica  
11300 Montevideo, Uruguay.  
Ph & Fax: +59 82 628 6562  
e-mail: alvaro@nautica.com.uy

**ASIA****China**

Peaceful Marine Electronics Co. Ltd.  
Guangzhou, Hong Kong, Dalian,  
Qingdao, Shanghai  
1701 Yanjiang Building  
195 Yan Jiang Zhong Rd. 510115  
Guangzhou, China.  
Ph: +86 20 3869 8839  
Fax: +86 20 3869 8780  
e-mail: sales@peaceful-marine.com  
web: www.peaceful-marine.com

**India**

Access India Overseas Pvt. Ltd.  
A-98, Sector 21,  
Noida - 201 301, India.  
Ph: +91 120 244 2697  
TeleFax: +91 120 253 7881  
Mobile: +91 98115 04557  
e-mail: vkpali@del3.vsnl.net.in  
Esmario Export Enterprises  
Block No. F-1, 3rd Floor, Surya Towers  
Sardar Patel Rd., Secunderbad 500 003.  
Ph: +91 40 2784 5163  
Fax: +91 40 2784 0595  
e-mail: gftee@hd1.vsnl.net.in  
web: www.esmario.com

**Korea**

Kumhomarine Technology Co. Ltd.  
#604-842, 2F, 1118-15, Janglim1-Dong,  
Saha-Gu, Busan, Korea.  
Ph: +82 51 293 8589  
Fax: +82 51 265 8984  
e-mail: info@kumhomarine.com  
web: www.kumhomarine.com

**Maldives**

Maizen Electronics Pte. Ltd.  
Heveyru, 08 Sosunmagu.  
Male, Maldives.  
Mobile: +960 78 24 44  
Ph: +960 32 32 11  
Fax: +960 32 57 07  
e-mail: ahmed@maizen.com.mv

**Singapore and Malaysia, Brunei,**

**Indonesia and Phillipines**  
RIQ PTE LTD.  
Blk 3007, 81 Ubi Road 1, #02-440,  
Singapore 408701.  
Ph: +65 6741 3723  
Fax: +65 6741 3746  
e-mail: riq@postone.com

**Taiwan**

Seafirst International Corporation  
No. 281, Hou-An Road, Chien-Chen  
Dist. Kaohsiung, Taiwan R.O.C.  
Ph: +886 7 831 2688  
Fax: +886 7 831 5001  
e-mail: seafirst@seed.net.tw  
web: www.seafirst.com.tw

**Thailand**

Thong Electronics (Thailand) Co. Ltd.  
923/588 Ta Prong Road, Mahachai,  
Muang, Samutsakhon 74000, Thailand.  
Ph: +66 34 411 919  
Fax: +66 34 422 919  
e-mail: sales@thongelectronics.com  
admins@thongelectronics.com  
web: www.thongelectronics.com

**Vietnam**

Haidang Co. Ltd.  
763 Le Hong Phong St. Ward 12  
District 10, Hochiminh City, Vietnam  
Ph: +84 8 863 2159  
Fax: +84 8 863 2524  
e-mail: haidang-co@hcm.vn.vn  
web: www.haidangvn.com

**MIDDLE EAST****Lebanon and Syria**

Balco Stores  
Balco Building, Moutran Street,  
Tripoli (via Beirut). - Lebanon  
P.O. Box: 6222.  
Ph: +961 6 624 512  
Fax: +961 6 628 211  
e-mail: balco@cyberia.net.lb

**United Arab Emirates**

Kuwait, Oman, Iran, Saudi  
Arabia, Bahrain and Qatar  
Abdullah Moh'd Ibrahim Trading, opp  
Creek Rd. Baniyas Road, Dubai.  
Ph: +971 4 229 1195  
Fax: +971 4 229 1198  
e-mail: sales@amitdubai.com

**AFRICA****South Africa**

Pertec (Pty) Ltd (Coastal Division)  
16 Paarden Eiland Road.  
Paarden Eiland, 7405  
PO Box 527,  
Paarden Eiland, 7420  
Cape Town, South Africa.  
Ph: +27 21 508 4077  
Fax: +27 21 508 4888  
e-mail: info@kfa.co.za  
web: www.pertec.co.za

**EUROPE****France, Belgium and Switzerland**

Plastimo International  
15, rue Ingénieur Verrière,  
BP435,  
56325 Lorient Cedex.  
Ph: +33 2 97 87 36 36  
Fax: +33 2 97 87 36 49  
e-mail: plastimo@plastimo.fr  
web: www.plastimo.fr

**Germany**

Navimo Deutschland  
15, rue Ingénieur Verrière  
BP435-56325 Lorient Cedex.  
Ph: +49 6105 92 10 09  
+49 6105 92 10 10  
+49 6105 92 10 12  
+49 6105 92 10 11  
e-mail:

plastimo.international@plastimo.fr  
website: www.plastimo.de

**Italy**

Navimo Italia  
Nuova Rade spa, Via del Pontasso 5  
16015 Casella Scriveria (GE).  
Ph: +39 1096 80162  
Fax: +39 1096 80150  
e-mail: info@nuovarade.com  
web: www.plastimo.it

**Holland**

Navimo Holland  
Industrieweg 4,  
2871 JE Schoonhoven.  
Ph: +31 182 320 522  
Fax: +31 182 320 519  
e-mail: info@plastimo.nl  
web: www.plastimo.nl

**United Kingdom**

Navimo UK  
Hamilton Business Park  
Bailey Road, Hedge End  
Southampton, Hants SO30 2HE.  
Ph: +44 01489 778 850  
Fax: +44 0870 751 1950  
e-mail: sales@plastimo.co.uk  
web: www.plastimo.co.uk

**Sweden, Denmark, Finland and Norway**

Navimo Nordic  
Lundenvägen 2,  
473 21 Henån.  
Ph: +46 304 360 60  
Fax: +46 304 307 43  
e-mail: info@plastimo.se  
web: www.plastimo.se

**Spain**

Navimo España  
Poligono Industrial de Cabrera  
Plaza Industria, S/N  
08349 Cabrera de Mar  
Barcelona.  
Ph: +34 93 750 75 04  
Fax: +34 93 750 75 34  
e-mail: plastimo@plastimo.es  
web: www.plastimo.es

**Portugal**

Navimo Portugal  
Avenida de India N°40  
1300-299 Lisbon.  
Ph: +351 21 362 04 57  
Fax: +351 21 362 29 08  
e-mail: plastimo@siroco-nautica.pt  
web: www.plastimo.com

**Other countries in Europe****Plastimo International**

15, rue Ingénieur Verrière BP435  
56325 Lorient Cedex, France.  
Ph: +33 2 97 87 36 59  
Fax: +33 2 97 87 36 29  
e-mail:  
plastimo.international@plastimo.fr  
web: www.plastimo.com

**HEADQUARTERS****Navman NZ Limited**

13-17 Kawana St.  
Northcote.  
P.O. Box 68 155,  
Newton,  
Auckland,  
New Zealand.  
Ph: +64 9 481 0500  
Fax: +64 9 481 0590  
e-mail: marine.sales@navman.com  
web: www.navman.com